

SELF TEST OPERATION




AUTOMATIC SELF TEST



MANUAL TEST (by pressing the TEST Button)



VISIBLE INDICATION

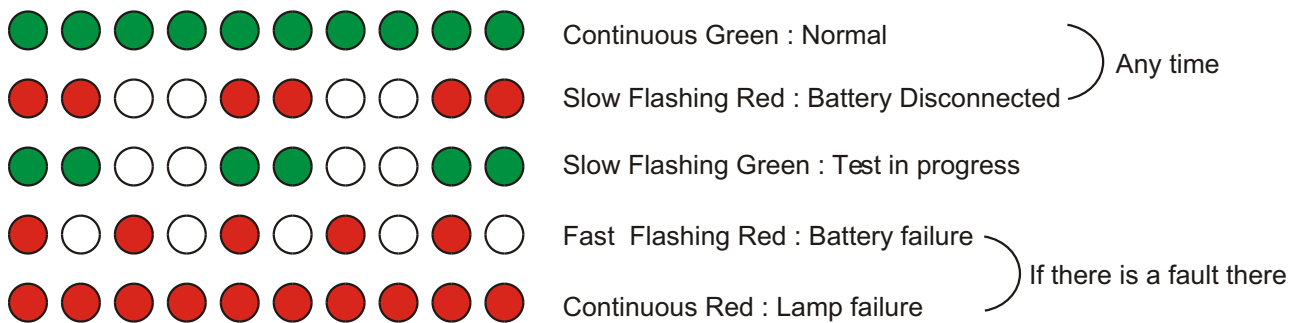

RESET THE FAULTS (by pressing the TEST Button)

